





TTM-339

PROGRAM CONTROLLER



TTM-339

PROGRAM CONTROLLER TTM-339

COMPACT SIZE PROGRAM CONTROLLER WITH HIGH FUNCTIONALITY AND HIGH PERFORMANCE

Features

Program Controller Specifications

A liquid crystal display program controller with maximum of 15 patterns and 99 steps.

Full Multiple Inputs

The multiple inputs of Thermocouple (13 types) • RTD (2 types) • Voltage (5 types) • Current (1 type) input

Utilizes a liquid crystal display

- ① The indication range has been extended to 5 digits
- 2 Realized the various indication with 7 segments
- 3 Adopted LED for the back light

Backup and Initialization for the Setting Value.

Compact Size

A compact sized body with depth of only 65mm. In addition, the protrusion of the front panel is only 2mm when TTM-339 is mounted.

Loader communication function

It is best for the set up work of a complicated parameter peculiar to the program controller.

- Cable: Option (sold separately)
- \bullet Software: Option (free) \cdots it can be downloaded from our website (Under development).

Blind function

The system can be configured so that only the selected parameters are displayed from the set of parameters.

Manual control

A manual output function enables application of various instrumentation systems.


Communication function (RS485: TOHO exclusive protocol / MODBUS)

The cable can be extended up to the length of 500m, and can connect up to 31 units simultaneously. With one host computer, a centralized control such as "The collection of all data" and "Change of respective setting value" are possible from a distance place.

Front Panel



| Lamp character | Explanation |
|----------------|--|
| PTN | Lights while the Pattern is displayed |
| STP | Lights while the Step is displayed |
| RUN | Lights while the Program is in operation |
| OUT | Lights while the Heating Output is turned ON |
| EV1 | Lights while EV1 is turned ON |
| EV2 | Lights while EV2 is turned ON |
| EV3 | Lights while EV3 is turned ON |
| EV4 | Lights while EV4 is turned ON |
| TS1 | Lights while Time Signal 1 is turned ON |
| TS2 | Lights while Time Signal 2 is turned ON |
| TS3 | Lights while Time Signal 3 is turned ON |
| TS4 | Lights while Time Signal 4 is turned ON |
| AUTO | Lights while the Auto is in operation |
| MANU | Lights while the Manual is in operation |
| AT | Lights in Auto-Tuning |
| END | Lights while the output is turned ON in using End Signal |
| TIME | Lights while Time is set. |

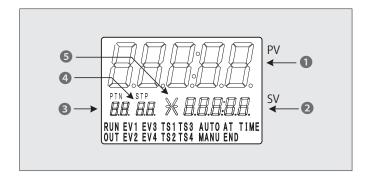

| NO | Segment | Explanation |
|----|--|---|
| 0 | PV (5 digits) | Displays PV, etc. |
| 2 | SV (5 digits) | Displays SV, etc. 0-fixed during pause While the timer is in operation, 「TIME」is displayed. |
| 3 | Pattern (Lower case 2-digits Left) | Displays a pattern number currently selected. |
| 4 | Step digits (Lower case 2-digits Right) | Pause: Displays a step number of the pattern currently selected. In operation: Displays a step number which is performing now |
| 6 | Operation condition (Lower case Center 6-SEG) | Displays a program operation condition |

| | Name of key switch | Explanation |
|---|-----------------------|--|
| 0 | Run/Hold key | Used for Run/Stop and Pause, etc. |
| 2 | Indication switch key | Used to change the indication, etc. |
| 8 | Digit move key | Moves setting digits leftward during the setting |
| 4 | Auto/Manual key | Switches AUTO/MANU |
| 6 | Reset key | Used for the screen reverse travel, etc. |
| 6 | Selection key | Used for the selection of the setting items |
| 0 | ▽ key | Used for decreasing the values, etc. |
| 8 | \triangle key | Used for increasing the values, etc. |

Standard Specifications

| Internocoupies No. 1, p. 5, N. B. U. U. Web 24, Paid-20, R. II 1 1 1 1 1 1 1 1 1 | | I = . | T | | | | | |
|--|--------------------|----------------------------------|--|---|---|--|--|--|
| Control output Cont | | Thermocouple | K, J, T, E, R, S, B, N, U, L, WRe5-26, PR40-20, PLII | | | | | |
| Control output Cont | Input type | RTD | Pt100, JPt100 (External resistance) | 10Ω or less per cable, t | nree cables must have the same resistance) | | | |
| Properties (Seeing) Control Co | | | 4 to 20mADC (Input resistance 250 | O) 0 to 1VDC 0 to 5VD | C 1 to 5VDC 0 to 10VDC 0 to 10mVDC | | | |
| Ply Process Value indication CD Indication (with LED back light, emission colors and Grozena, 5 digits, character beight 20mm Solitus indication part CD Indication (with LED back light, emission colors in Set), 5 digits, character beight from CD Indication (with LED back light, emission colors in Set), 5 digit, character beight from CD Indication (with LED back light, emission colors in Set), 5 digit, character beight from CD Indication (with LED back light, emission colors in Set), 5 digit, character beight from CD Indication (with LED back light, emission colors in Set), 2 digit, character height from CD Indication CD Indication (with LED back light, emission colors in Set), 2 digit, character height 20mm CD Indication CD Indi | | Current/Voltage | (Input resistance 1MO or more) | c, I to SVDC, o to ToVDC, o to TolliVDC | | | | |
| Visiting value indication Setting inflication part C.D Indication (with EDD ask light, emission on oth Refu], 5 digit, character height down C.D Indication (with EDD ask light, emission on oth Refu], 5 digit, indication betty it men C.D Indication (with EDD ask light, emission on oth Refu], 5 digit, indication betty it men C.D Indication (with EDD ask light, emission on oth Refu], 2 digit, indication betty it men C.D Indication (with EDD ask light, emission on oth Refu], 2 digit, indication betty it men C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light, emission other), 2 digit, character height down C.D Indication (with EDD ask light), 2 digit, character height down C.D Indication (with EDD ask light), 2 digit, character height down C.D Indication (with EDD ask light), 2 digit, | | DV (Due sees Value) in direction | | | | | | |
| Indication | | | | | | | | |
| Auxiliary output | | | | | | | | |
| Sept Indication Part E.D Indication (with LLD back light, emission color is Green). 2 digits, character height from character (LD indication (with LD back light), emission color is Green). 2 digits, character height from propriets and sort (PLP, PLP, SLP, SLP, SLP, SLP, SLP, SLP, | | • | | | | | | |
| Restriction indication LCD indication Red Blaw, OUT, Pt. Pt. 28, 18, 41, 13, 12, 13, 13, 15, 186, 186, 100, 000 per (PTN, SPF) | (LCD indication) | Pattern indication part | , | | | | | |
| PiD (With auto-Luning) Proportional band (Pt. P., P.) 1 of 10 0.00 (%) of the limiter span (Low-Mixedium/High temperature) Dead band (DR) Proportion (pt. Pt. Pt.) 1 of 10 0.00 (%) of | | Step indication Part | LCD indication (with LED back ligh | it, emission color is Gree | en), 2 digits, character height 6mm | | | |
| PiD (With auto-Luning) Proportional band (Pt. P., P.) 1 of 10 0.00 (%) of the limiter span (Low-Mixedium/High temperature) Dead band (DR) Proportion (pt. Pt. Pt.) 1 of 10 0.00 (%) of | | Each function indication | LCD indication Red (RUN, OUT, EV | 1, EV2, EV3, EV4, TS1, TS | 2, TS3, TS4, TIME, AUTO, MANU, AT, END) Green (PTN, STP) | | | |
| PiD Integration time (E) 1, 2, 13 0 to 3600 set (D OFF) (LowMedium/High temperature) | | | | | | | | |
| With auto tuning Differentiation time (ID, ID, ID, ID, ID, ID, ID, ID, ID, ID, | | DID | | | | | | |
| Proportion cycle (T.I.72) | | | | | | | | |
| Dead band (DB) Temperature input -999 st 0 999 0 cr -999-999 (CT) | | (with auto-turning) | | | (Low/Medium/High temperature) | | | |
| Control Cont | | | | | | | | |
| Availary output Availa | | Dead hand (DR) | Temperature input | | | | | |
| ON/OF OFF point position or provided position or provided position or the specified position or provided position or the specified position or provided pos | | Dead Dalid (DD) | Analog input | -9999 to 9999 (digit |) (The decimal point position is the specified position.) | | | |
| ON/OFF OFF point position selection setting OFF point position selection setting OFF point position selection setting OFF point position OFF position positi | | | | Temperature input | 0.0 to 999.9, 0 to 999 (°C) | | | |
| ON/OFF OFF point position selection setting () Setting of normal motion/ Setting of normal motion/ Setting of normal motion/ Setting of normal motion () Setting of normal | Control | | Sensitivity (C1,C2) | Analan innut | 0 to 9999 (digit) (The decimal point position is the specified | | | |
| Setting of normal motion/ reconstruction Setting of normal motion/ reconstruction Reverse motion (heating) Round motion (heating) | | | | Allalog lliput | position.) | | | |
| Setting of normal motion reverse motion from the state of | | ON/OFF | OFF point position selection setting | SV unit setting High/ | Medium/Low | | | |
| Setting of normal motion reverse motion for reverse motion for reverse motion for more, output voltage accuracy ±1V (23 °C ±10 °C), leak current 21 µA or less (00 °L) (00 | | | | Temperature input | -999.9 to 999.9, -999 to 999 (°C) | | | |
| Setting of normal motion reverse motion for reverse motion for reverse motion for more, output voltage accuracy ±1V (23 °C ±10 °C), leak current 21 µA or less (00 °L) (00 | | | OFF point position | · · · | | | | |
| Setting formal motion/ reverse motion (heating) Relay contact output (DVT 1 only) Relay contact output (DVT 1 only) Relay contact output (DVT 1 only) 250xAC 3A (Resistance load), 1a contact, minimum load 5V, 100mA SSR drive vottage (DVT 1, DVT 2 selectable) (DVT 1, DVT 2 selectable) (DVT 1, DVT 2 selectable) (DVT 2 | | | | Analog input | | | | |
| Normal motion (cooling) Normal motion (cooling) | | Setting of normal motion/ | Reverse motion (heating) | | | | | |
| Relay contact output (DUT 1 only) 250/W.2 3A (Resistance load), 1a contact, minimum load SV, 100mA (SR drive voltage (OUT), 10/T2 selectable) (when output is turned OFF) | | | · ' ' | | | | | |
| SR drive voltage (DUT 3, OUT 2 selectable) 0 to 12VDC (Load resistance 6000) or more), output voltage accuracy ±1V (23°C±10°C), leak current 21 µA or less (Morth output is turned OFF) 4 to 20mADC (Load resistance 60001 or less), output accuracy £5±0.3% (23°C±10°C), leak current 21 µA or less (Morth output is turned OFF) 22.44°DC (100mA (MAC) 100mA (MAC) | | | | ontact minimum load 5 | V 100mA | | | |
| Control output Courtent (OUT 2 only) (when output is turned OFF) Courtent (OUT 2 only) Court | | | | | | | | |
| Current (OUT 2 only) | Control output | | | z or more), output voit | age accuracy ± 17 (23 C ± 10 C), leak current 21 µA or less | | | |
| Current Voltage Current Vo | zoor output | | | O or less) output accu | racy FS+0.3% (23°C+10°C) leak current 21 u A or loss | | | |
| Open collector (6 points) 26.4VDC 100mA (MAX) Output name Ts1 to 4, TIME, EV4 | | Current (OUT 2 only) | (when output is turned OFF) | , 22 or 1633), output accu | racy 1 3 ± 0.3 /0 (23 C ± 10 C), leak current 21 µ A UI less | | | |
| Output name TS1 to 4, TIME, EVA TIME, | | | | | | | | |
| Relay contact (4 points) 250/MC 1 Al (Reisstance load) 1a contact 1a contact 1b coupts name EV1 to 3, END 1b coupts name and ev1 to 3, END 1b coupts | | Open collector (6 points) | <u> </u> | | | | | |
| Relay contact (4 points) Output name EVI to 3, END | | | | | | | | |
| Setting range Cupper and Lower limit Temperature input However, thermocouples (S, S, WikeS-26 and PR40-20 are -1999 to 9999 (°C) Analog input -1999 to 29999 (°C) Analog input -1999 to 29999 (°C) Analog input -1999 to 29999 (°C) Analog input -19999 to 29999 (°C) Analog input -19999 to 29999 (°C) Analog input -19999 to 29999 (°C) -19999 to 29999 to 299999 to 299999 to 299999 to 299999 to 299999 to 2999999 to 29999999999 | | Relay contact (4 points) | ` , , , , , , , , , , , , , , , , , , , | ontact | | | | |
| Semipling cycle Semistrivity setting Femperature input However, thermocouples R, S, B, WRe5-26 and PR40-20 are -1999 to 9999 (°C) | | , , , , | Output name EV1 to 3, END | | 40.0 | | | |
| Comparison of | Auxiliary output | Sotting range | Temperature input | | | | | |
| Analog input ——1999 to 29999 to 29999 to 29999 to 2999 (C) Femperature input ——0.0 to 9999, 0 to 9999 (C) Analog input ——19999 (digit) Normal open, Normal close Normal open, Normal close Thermocouple Thermocouple Thermocouple Thermocouple Webs_26 Either ± (0.3% +1 digit) of process value or ±2°C, whichever is bigger (23°C±10°C). However, ±3°C between — 100 to 0°C, ±3°C between — 200 to —100°C to 100°C to | | | Temperature input | However, thermocou | ples R, S, B, WRe5-26 and PR40-20 are −1999 to 9999 (°C) | | | |
| Sensitivity setting Normal open, Normal | | (opper and Lower mine) | Analog input | -19999 to 29999 (digit) | | | | |
| Sensitivity setting Normal open, Normal | | | Temperature input | | | | | |
| Polarity setting Normal open, Normal close | | Sensitivity setting | | 0 to 9999 (digit) | | | | |
| Sampling cycle | | Polarity setting | | | | | | |
| Thermocouple | Sampling cyclo | 1 oldrity setting | • • | | | | | |
| There is no accuracy specified below 400°C for 8-Thermocouple. Thermocouple | Jamping Cycle | | 0.2 360 | Fithor ± (0.20/ +1 digit | of process value or $\pm 3^{\circ}$ C, which ever is higger (22°C $\pm 10^{\circ}$ C) | | | |
| There is no accuracy specified below 400°C for 8-Thermocouple. Thermocouple | | | K. J. T. E. R . B. N. S | However, ±3°C betw | een -100 to 0° C, $\pm 4^{\circ}$ C between -200 to -100° C | | | |
| Thermocouple Week-36 | | | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, | There is no accuracy s | pecified below 400°C for B-Thermocouple. | | | |
| Measurement accuracy Measurement accuracy Measurement Measurement accuracy Measurement M | | | | · | | | | |
| PEROLO Either ± (0.3% +1 digit.) There is no accuracy specified below 800°C | | Thermocouple | U, L | $\pm 6^{\circ}$ C for less than 0° C. | | | | |
| PEROLO Either ± (0.3% +1 digit.) There is no accuracy specified below 800°C | Management | | WRe5-26 | | | | | |
| PLT Either ± (0.3% +1 digit) of process value or ± 2°C, whichever is bigger. RTD P1100, JPt100 Either ± (0.3% +1 digit) of process value or ± 2°C, whichever is bigger. Either ± (0.3% +1 digit) of process value or ± 0.9°C, whichever is bigger (23°C ± 10°C). 10 to 1VDC, 0 to 5VDC, 1 to 5VDC, 1 to 5VDC, 1 to 5VDC, 2 to 3% of F5±1 digit (23°C ± 10°C). 10 to 10 mVDC ± 0.5% of F5±1 digit (23°C ± 10°C). 10 to 10 mVDC ± 0.5% of F5±1 digit (23°C ± 10°C). 10 to 240VAC 50/60Hz (Permissible voltage range is 85 to 110%). Weight 300g or less 10 VA or less 10 VA or less 10 Standard range of ambient temperature humidity (Compensating range such as accuracy). Usable range of ambient temperature humidity -0 to 50°C, 20 to 90% RH (No condensation). Storage range of ambient temperature humidity -0 to 7°C (No freezing and condensation). 5 to 95% RH (No condensation). Pattern numbers 1 to 99 (Maximum value changes depending on selected pattern numbers). Pattern numbers 1 to 99 (Maximum value changes depending on selected pattern numbers). Wait function setting (1 to 4 common) Wait zone setting Time signal function setting (1 to 4 common). End signal ON time 0 to 99 hrs 59 min 0 Or 99 hrs 59 min 0 Or 999 hrs 59 min 0 Or 999 hrs 59 min 0 Or 400 phrs 59 min | | | PR40-20 | | | | | |
| RTD | accuracy | | | | | | | |
| Current + Voltage | | RTD | | | | | | |
| Current · Voltage | | NID . | | Little: ±(0.570 i i digit | or process value or ±0.5 c, whichever is bigger (25 c±10 c). | | | |
| Memory element EEPROM | | Current Noltage | | $\pm 0.3\%$ of FS ± 1 digit | (23°C±10°C) | | | |
| Memory element EEPROM 100 to 240VAC 50/60Hz (Permissible voltage range is 85 to 110%) | | Current Voltage | | | | | | |
| Meight 300g or less 300g or le | Mamanualament | | | | | | | |
| Power consumption 10VA or less | | lv | | | | | | |
| Power consumption 10VÅ or less Instruction manual, metal attachment 23°C±10°C, 45 to 75% RH (Suppensating range such as accuracy) 23°C±10°C, 45 to 75% RH (Suppensating range such as accuracy) 0 to 50°C, 20 to 90% RH (No condensation) 5 to 95% RH (No condensation) 5 to 70°C (No freezing and condensation), 5 to 95% RH (No condensation) | | ıy | · · · · · · · · · · · · · · · · · · · | | | | | |
| Accessories Standard range of ambient temperature humidity (Compensating range such as accuracy) Usable range of ambient temperature humidity Storage range of ambient temperature humidity To 70°C, 20 to 90°R RH (No condensation) Pattern numbers Step numbers 1 to 99 (Maximum value changes depending on selected pattern numbers) Step numbers 1 to 99 (Maximum value changes depending on selected pattern numbers) Temperature input 0.0 to 999.9, 0 to 999. (°C) Analog input 0 to 999.9, 0 to 999. (°C) Analog input 0 to 999.9, 0 to 999. (°C) Analog input 0 to 999.9 (digit) Wait time setting 0 to 99 hrs 59 min Fine signal function setting (1 to 4 common) PID setting Memory points 3points (Low/Medium/High temperature) Low temperature (PID No1): [Minimum value of setting temperature range (SLL)] to (Intermediate point 1 (PM1)] to [Intermediate point1 (PM1)] to [Intermediate point2 (PM2)] to [Maximum value of setting temperature range] to [Maximum value of setting temperature range] to [Intermediate point1] setting = [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start selection Temperature Temperature input SLL to SLH (°C) | | | | | | | | |
| Standard range of ambient temperature humidity (Compensating range such as accuracy) 23°C±10°C , 45 to 75% RH | | on | | | | | | |
| Usable range of ambient temperature humidity | | | Instruction manual, metal attachn | nent | | | | |
| Storage range of ambient temperature humidity 0 to 50°C, 20 to 90% RH (No condensation) | Standard range of | ambient temperature humidity | 23°C±10°C . 45 to 75% RH | | | | | |
| Function Program specifications Program specificatio | | | · | | | | | |
| Pattern numbers 1 to 15 | | | | | | | | |
| Step numbers | Storage range of a | ambient temperature humidity | −20 to 70°C (No freezing and cond | densation), 5 to 95% RH | (No condensation) | | | |
| Wait function setting Temperature input 0.0 to 999.9, 0 to 999 (°C) | | | Pattern numbers | 1 to 15 | | | | |
| Wait function setting Temperature input 0.0 to 999.9, 0 to 999 (°C) | | | Step numbers | 1 to 99 (Maximum va | ue changes depending on selected pattern numbers) | | | |
| Wait function setting (1 to 4 common) End signal ON time Time signal function setting (1 to 4 common) End signal ON time Time signal function setting (1 to 4 common) PID setting Program specifications PID range setting PID range setting PID range setting Intermediate point setting Intermediate point setting PV start/SV start selection Wait zone setting O to 99 hrs 59 min ON delay timer O to 99 hrs 59 min Oto 99 hrs 59 min Oto 99 hrs 59 min OFF delay timer O to 99 hrs 59 min OFF delay timer O to 99 hrs 59 min Demory points 3points (Low/Medium/High temperature) Low temperature (PID No1): [Minimum value of setting temperature range (SLL)] Medium temperature (PID No2): [Intermediate point1 (PM1)] High temperature (PID No3): [Intermediate point2 (PM2)] to [Maximum value of setting temperature range of setting temperature ran | | | · | | | | | |
| Function Program specifications PlD range setting PlD range setting PlD range setting Intermediate point setting Intermediate point setting PV start/SV start selection Wait time setting O to 99 hrs 59 min ON delay timer O to 99 hrs 59 min OF delay timer O to 99 hrs 59 min OF delay timer O to 99 hrs 59 min OF delay timer Oto 99 hrs 59 min OF delay timer OF dela | | | | Wait zone setting | | | | |
| Function Program specifications PID range setting PID range setting | | | (I to 4 common) | Wait time setting | 3 1 | | | |
| Function Program specifications Program specifications PID range setting PID range setting PID range setting PID range setting PID range setting PID range setting PID range setting PID range setting semperature (PID No1): [Initermediate point1 (PM1)] to [Intermediate point2 (PM2)] High temperature (PID No3): [Intermediate point2 (PM2)] to [Maximum value of setting temperature range (SLLH)] Intermediate point setting = [Minimum value of setting temperature range] to [Maximum value of setting temperature range] to [Maximum value of setting temperature range] PV start/SV start switchable PV start/SV start switchable Start temperature Temperature input SLL to SLH (°C) | | | End signal ON time | | - 10 yy mis 3y min | | | |
| Function Program specifications Program specifications PID setting Memory points 3points (Low/Medium/High temperature) Low temperature (PID No1): [Minimum value of setting temperature range (SLL)] to [Intermediate point 1 (PM1)] to [Intermediate point2 (PM2)] High temperature (PID No2): [Intermediate point1 (PM1)] to [Maximum value of setting temperature range (SLH)] Intermediate point setting Intermediate point setting = [Minimum value of setting temperature range] to [Maximum value of setting temperature range] to [Maximum value of setting temperature range] PV start/SV start selection OFF delay timer 0 to 99 hrs 59 min Memory points 3points (Low/Medium/High temperature range (SLL)] Intermediate point (PM1)] to [Intermediate point1 (PM1)] to [Intermediate point2 (PM2)] Intermediate point1 setting = [Minimum value of setting temperature range] to [Maximum value of setting temperature range] PV start/SV start switchable PV start/SV start switchable Start temperature [Temperature input] SLL to SLH (°C) | | | | | 0 to 90 hrs 50 min | | | |
| Program specifications Program specifications PID range setting Memory points 3points (Low/Medium/High temperature) Low temperature (PID No1): [Minimum value of setting temperature range (SLL)] Medium temperature (PID No2): [Intermediate point1 (PM1)] to [Intermediate point2 (PM2)] High temperature range (SLH)] Intermediate point1 setting= [Minimum value of setting temperature range] to [Maximum value of setting temperature range-5.0°C] Intermediate point2 setting= [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start switchable PV start/SV start switchable Start temperature Temperature input SLL to SLH (°C) | | | (1 to 4 common) | | | | | |
| Program specifications PID range setting PID range setting temperature (PID No1): [Minimum value of setting temperature range (SLL)] PID range setting PID range setting temperature range (SLL) PID range setting PID range setting temperature range (SLL) PID range setting PID range setting temperature range (SLL) Intermediate point 1 (PM1)] PID range setting temperature range (SLL) Intermediate point 1 (PM1)] PID range setting temperature range (SLL) Intermediate point 1 (PM1)] PID range setting temperature (PID No2): [Intermediate point 1 (PM1)] PID range setting temperature range (SLL) Intermediate point 1 (PM1)] PID range setting temperature (PID No2): [Intermediate point 1 (PM1)] PID range setting temperature range (SLL) Intermediate point 1 (PM1)] PID range setting temperature range (SLL intermediate point 1 (PM1)] PID range setting temperature range (SLL intermediate point 1 (PM1)] PID range setting temperature range (SLL intermediate point 1 (PM1)] PID range setting temperature range (SLL intermediate point 1 (PM1)] PID range setting temperature range (SLL intermediate point 1 (PM1)] PID range setting temperature range (SLL intermediate point 1 (PM2)] PID range setting temperature range (SLL intermediate point 1 (PM2)] PID range setting temperature range (SLL intermediate point 1 (PM2)] PID ra | | | <u> </u> | • | | | | |
| Program specifications PID range setting The specification of the specific setting to the specific setting temperature (PID No2): [Intermediate point1 (PM1)] to [Intermediate point2 (PM2)] High temperature range (SLH)] Intermediate point setting temperature range (SLH)] Intermediate point1 setting= [Minimum value of setting temperature range-5.0°C] Intermediate point2 setting = [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start switchable PV start/SV start switchable Start temperature Temperature input SLL to SLH (°C) | | | צוין setting | | | | | |
| PID range setting Medium temperature (PID No2): [Intermediate point1 (PM1)] to [Intermediate point2 (PM2)] High temperature (PID No3): [Intermediate point2 (PM2)] to [Maximum value of setting temperature range (SLH)] Intermediate point setting Intermediate point setting= [Minimum value of setting temperature range] to [Maximum value of setting temperature range-5.0°C] Intermediate point2 setting= [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start switchable Start temperature Temperature input SLL to SLH (°C) | | | | | | | | |
| point2 (PM2)] High temperature (PID No3): [Intermediate point2 (PM2)] to [Maximum value of setting temperature range (SLH)] Intermediate point setting temperature range [Minimum value of setting temperature range] to [Maximum value of setting temperature range-5.0°C] Intermediate point2 setting temperature range Temperature range PV start/SV start selection PV start/SV start switchable Start temperature input SLL to SLH (°C) | Function | Program specifications | | | | | | |
| High temperature (PID No3): [Intermediate point2 (PM2)] to [Maximum value of setting temperature range (SLH)] Intermediate point setting | | | PID range setting | | e (אוט אסצ): [Intermediate point ו (PM1)] to [Intermediate | | | |
| Setting temperature range (SLH) | | | | | D. Ma-2). [[mtaumandiate graint2 /D842]] 4 | | | |
| Intermediate point setting Intermediate point setting Intermediate point setting Intermediate point setting = [Minimum value of setting temperature range-5.0°C] Intermediate point2 setting = [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start switchable PV start/SV start switchable Start temperature Temperature input SLL to SLH (°C) | | | | | | | | |
| Intermediate point setting [Maximum value of setting temperature range-5.0°C] Intermediate point2 setting = [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start selection Start temperature Temperature input SLL to SLH (°C) | | | | | | | | |
| Intermediate point setting Intermediate point2 setting = [Setting value of intermediate point1] to [Maximum value of setting temperature range] PV start/SV start selection PV start/SV start selection Start temperature Temperature input SLL to SLH (°C) | | | | | | | | |
| value of setting temperature range PV start/SV start switchable PV start/SV start selection Start temperature Temperature input SLL to SLH (°C) | | | Intermediate point setting | | | | | |
| PV start/SV start switchable PV start/SV start selection Start temperature Temperature input SLL to SLH (°C) | | | Intermediate | | | | | |
| PV start/SV start selection Start temperature Temperature input SLL to SLH (℃) | | | | | erature rangel | | | |
| | | | | value of setting temp | | | | |
| Secting milen of start Alialog illput State Ostra (digit) | | | PV start/SV start selection | value of setting temp PV start/SV start swite | hable | | | |
| | | | PV start/SV start selection | value of setting temp PV start/SV start swite Start temperature | chable Temperature input SLL to SLH (°C) | | | |

Standard Specifications

| | | Output in operation/End signal o | utput selectable and co | nfigurable | | |
|----------|-------------------------------------|---|--|--|--|--|
| | Program specifications | External drive signal selection | Internal operation, external operation | | | |
| | | Temperature range setting for | Temperature input | 0.0 to 2999.9, 0 to 2999 (°C) | | |
| | | power failure recovery | Analog input 0 to 2999 (digit) | | | |
| | | Setting unit | 3 | | | |
| | Timer specifications | Setting time | | | | |
| | | Setting accuracy $\pm (0.5\% + 0.5 \text{ sec}) \text{ of setting time}$ | | | | |
| | | Manipulated variable function selection (MLF) | None, Manipulated va | ariable limiter, manip | ulated variable current limiter | |
| | | | Upper limit | MLL1 to 100.0 (%) | , MLL2 to 100.0 (%) | |
| | Manifestate describble | Manipulated variable limiter | (MLH1 to MLH4) | MLL3 to 100.0 (%) | , MLL4 to 100.0 (%) | |
| | Manipulated variable | Manipulated variable limiter | Lower limit | 0.0 to MLL1 (%), 0 | .0 to MLL2 (%) | |
| | | | (MLL1 to MLL4) | 0.0 to MLL3 (%), 0 | .0 to MLL4 (%) | |
| | | Manipulated variable change | Percentage of rise for | manipulated variable | 0.0 to 549.9 (%) (0.0% : function OFF) | |
| | | limiter rise | Rise time of manipula | ted variable | 0 to 3600 (sec) (0: function is none) | |
| | | Upper limit (SLH) | Temperature input | (SLL+5.0) to SV se setting range upper | tting range upper limit, (SLL+5) to SV r limit ($^{\circ}$ C) | |
| | Setting limiter | | Analog input | (SLL+50) to SV setting range upper limit (digit) | | |
| | (SLL), (SLH) | Lower limit (SLL) | Temperature input | SV setting range lower limit to (SLH-5.0), SV setting ran lower limit to (SLH-5) ($^{\circ}$ C) | | |
| Function | | | Analog input | SV setting range lower limit to (SLH-50) (digit) | | |
| | Scaling setting | Upper limit (FSH1) | FSL1 to 29999 (digit) | | | |
| | (Analog input only) | Lower limit (FSL1) | -19999 to FSH1 (dig | it) | | |
| | Control type (CNT) | PID control, ON/OFF control | | | | |
| | PV correction gain setting (PVG) | 0.500 to 2.000 (times) | | | | |
| | PV correction zero setting (PVS) | Temperature input | -999.9 to 999.9, -99 | 99 to 999 (°C) | | |
| | r v correction zero setting (r v s) | Analog input -9999 to 9999 (digit) | | | | |
| | PV filter setting (PDF1) | 0.0 to 99.9 (sec) | | | | |
| | Special PV filter setting (PDFS) | 0.0 to 99.9 (sec) | | | | |
| | Anti reset windup | 0.0 to 110.0 (%) (Function OFF by | | | | |
| | Manual reset | 0.0 to 100.0 (%) (-100.0 to 100.0 | | control) | | |
| | | | Temperature input | 0.0 to 999.9, 0 to 99 | 99 (℃) | |
| | Main control loop abnormal | PV variation setting | Analog input | 0 to 9999 (digit) (The decimal point position is the specified position.) | | |
| | | Time setting | 0 to 3600 (sec) | | | |
| | Decimal point position setting | Temperature input | 1℃,0.1℃ | | | |
| | (DP) | Analog input | 1/digit, 0.1/digit, 0.01/ | digit, 0.001/digit, 0.0/ | 001/digit | |
| | Lock function (LOC) | Normal screen, pattern No. setting mode, alarm temperature setting mode, PID setting mode, common parameter set mode (SET1 to 12), setting temperature (all steps at one time), wait function setting (all steps at one time), time signal 4 function setting (all steps at one time), manipulated variable limiter function setting (all steps at one time), setting time steps at one time), end signal ON time | | | ng (all steps at one time), time signal 1 to | |


Option specifications

| | Number of input point | 7 points | |
|----------|-----------------------|--|--|
| | Input specification | No voltage contact | |
| DI input | Function | Run/Reset, Hold, Step advance, pattern selection | |
| | Minimum input time | 200 mS | |
| | When ON current | Maximum 6 mADC | |
| | When OFF voltage | Maximum 6 VDC | |

| | Number of input point | 1 point | |
|----------|---------------------------|---|--|
| | Measurement current range | 0.0 to 50.0 A | |
| | Setting current range | 0.0 to 30.0 A | |
| CT input | Setting resolution | 0.1A | |
| | Setting accuracy | ±5% of full span (1.0 A or less is outside accuracy) | |
| | Current limit setting | Memory points 20 points | |

| | | Communication | Loader communication |
|----------|------------------------------|---|---|
| | Communication standard | RS-485 (1:10) Normal communication, Communication between the main unit and the sub-units. (The main unit-sub unit communication under development) | TTL (1:1) |
| | Communication terminal | RS-485 exclusive terminal | Loader communication exclusive terminal |
| | Protocol | TOHO protocol, MODBUS protocol (RTU mode), MODBUS protocol (ASCII mode) | TOHO protocol |
| | Direction of information | Half duplex | Half duplex |
| | Synchronous system | Asynchronous | Asynchronous |
| | Transmission code | ASCII | ASCII |
| | Interface | RS-485 (two lines) | TTL level |
| Commu- | Communication speed | 2400/4800/9600/19200/38400bps | 2400/4800/9600/19200/38400bps |
| nication | Communication distance | 500 m | |
| | Response delay time | 0 to 250 mS | 0 to 250 mS |
| | Communication switch setting | Write protect, write enable | |
| | | Start bit: 1 bit fixed | Start bit: 1 bit fixed |
| | | Stop bit: 1/2 bit | Stop bit: 1/2 bit |
| | | Data length: 7/8 bit | Data length: 7/8 bit |
| | | MODBUS: ASCII…7 bit fixed | |
| | Character | MODBUS: RTU···8 bit fixed | |
| | | Parity: None/Odd number/Even number | Parity: None/Odd number/Even number |
| | | BCC check: No/Yes | BCC check: No/Yes |
| | | Address: TOHO 1 to 99 (stations) MODBUS 1 to 247 (stations) | Address: 1 to 99 stations |

Operation flow

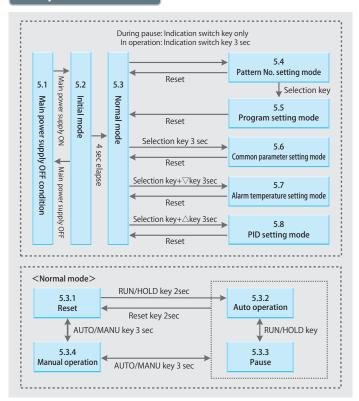

Input and scale range


| Input type | | | Measurement/Setting Range | Indication resolution |
|-------------------|-------------|----|---------------------------|-----------------------|
| | K | °C | -200.0 to +1372.0 | |
| | J | °C | -200.0 to +1200.0 | 1℃ /0.1℃ |
| | T | °C | -200.0 to +400.0 | 1 C /0.1 C |
| | E | °C | -200.0 to +1000.0 | |
| | R | °C | −50 to +1768 | |
| T1 | S | °C | −50 to +1768 | 1℃ |
| Thermo- couple | В | °C | 0 to 1800 | |
| coupie | N | °C | -200.0 to +1300.0 | |
| | U | °C | -200.0 to +400.0 | 1℃/0.1℃ |
| | L | °C | -200.0 to +900.0 | |
| | PR40-20 | °C | 0 to 1880 | 1℃ |
| | WRe5-26 | °C | 0 to 2300 | 10 |
| | PL II | °C | 0.0 to 1390.0 | |
| RTD | Pt100 | °C | -200.0 to +850.0 | 1℃/0.1℃ |
| עוא | JPt100 | °C | -200.0 to +510.0 | |
| | 0 to 1VDC | | | |
| | 0 to 5VDC | | -19999 to +29999 | A decimal point |
| Voltage | 1 to 5VDC | | Indication width is | |
| | 0 to 10VDC | | 20000 or less | position can be |
| | 0 to 10mVDC | | 20000 01 less | changed at random. |
| Current | 4 to 20mADC | | | |

Terminal connection diagram


| | Power | | 1 | |
|--------------------------------------|-----------------------------------|---|----|--|
| Power | | | 2 | |
| Not use | d | | 3 | |
| OUT1 Relay/SSR drive vol | taga quitaut | - | 4 | |
| OOTT Relay/33K drive voi | tage output | + | 5 | |
| OLITA SCD drive /4 to 20m ADC output | | | | |
| 0012 33K d11Ve/4 t0 2011 | OUT2 SSR drive/4 to 20mADC output | | | |
| Not used | | | | |
| | EV1 | | 9 | |
| Dalass sames at assessed | EV2 | | 10 | |
| Relay contact output | EV3 | | 11 | |
| | COM | | 12 | |

| Χ | Α | Communica | tion (RS-485) |
|----|------|-----------------|----------------|
| 25 | В | Communica | 11011 (N3-403) |
| 26 | | Pattern1 | |
| 27 | | Pattern2 | |
| 28 | | Pattern3 | |
| 29 | | Pattern4 | DI input |
| 30 | | RUN/RDY | Drillput |
| 31 | Oper | ation switching | |
| 32 | S | tep advance | |
| 33 | | COM | |
| 34 | | END | Relay contact |
| Υ | | COM | output |
| | | | |

Panel Cut & Dimensions

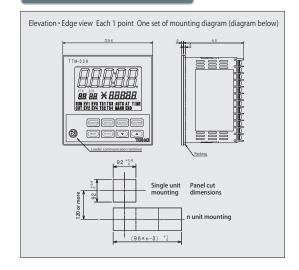

Panel installation

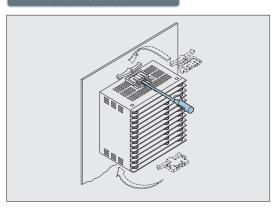

Contact output

Event function 1 (4 points)

| Eve | Event function 1 (4 points) | | | | |
|-----|--------------------------------------|---|-----------------------------------|--|--|
| | Function | | Additional function | | |
| 0 | None | 0 | None | | |
| 1 | Deviation upper and lower limit | 1 | Hold | | |
| 2 | Deviation upper limit | 2 | Wait | | |
| 3 | Deviation lower limit | 3 | Hold + Wait | | |
| 4 | 4 Deviation range | | Event function (Loop Abnormal) | | |
| 5 | Absolute value upper and lower limit | | | | |
| 5 | Absolute value upper limit | | Function | | |
| 7 | Absolute value lower limit | i | None | | |
| Ŕ | Absolute value range | | Exist | | |
| | , ibsolute raide railge | | Additional function | | |
| | | í | None | | |
| | | | Hold | | |

| 13 | + | EV4 | ŀ | | | | |
|-----|----------------------------------|------|----|------------------------|-----------------|---|--|
| 14 | + | TS1 | | | | | |
| 15 | + | TS2 | 2 | | | | |
| 16 | + | TS3 | } | Open collect output | | | |
| 17 | + | TS4 | | output | | | |
| 18 | + | TIMI | Ε | | | | |
| 19 | - | CON | Λ | | | | |
| 20 | CT in must | | | | | | |
| 21 | CT input | | | | | | |
| 22 | ' | | | | | | |
| 23 | Sensor input (See diagram below) | | | | | | |
| 24 | | | | | | | |
| 22 | b | | 22 | | 22 | + | |
| 23 | В | | 23 | _ | 23 | _ | |
| 24 | Α | | 24 | + | 24 | | |
| RTD | | | | TC/10mV | Current/Voltage | | |


Description of Functions

Wait function

It is a function to wait for the time course of the next step when PV doesn't reach the wait zone after the transition from the present step to the next step.

Waits until the maximum wait time.


The different wait conditions can be set by selecting the wait functions 1 to 4. When it is set to "0", the wait continues until PV exceeds SV.

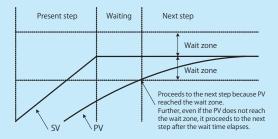

Auto-tuning function

The auto-tuning starts at each point of Low/Medium/High temperature. The temperature, to which the auto-tuning is performed, is set on the respective start screen and the auto-tuning is started by pressing the RUN/HOLD key. AT-1 (\sim 3)/PV is alternately indicated on the PV display digits during the auto-tuning.

The auto-tuning is stopped by pressing the RUN/HOLD key again.

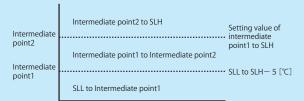

PV start/SV start

PV start The operation starts at the ramp step of the rising slope which includes the measurement temperature. In addition, the operation starts from the elapsed time, assuming that the time has elapsed until the start point. The start point is calculated from 0°C /0 digit. The operation is started by the elapsed time 0 minutes if below 0°C /0 digit.

SV start The program operation starts according to the PV start temperature setting.


Digital PV filter

It is a function to realize the CR filter effect on the software by performing primary delay operation to PV of input 1. The effect of the filter can be set by the time constant. (Time constant is the time it takes for the PV value to reach up to about 63% when the input changes in step pattern.)

≪CR filter…Primary delay filter


The use of Digital PV filter:


- ${\bf \textcircled{1}}$ Removal of high frequency noise... The noise effect is minimized when the electrical noise is added to input.
- ②A response can be delayed against the sudden change of the input.

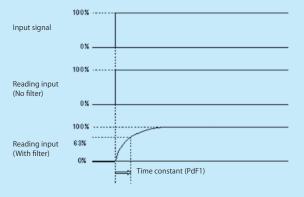

Manipulated variable current limiter

This function divides SLL to SLH into 10 segments and performs the manipulated variable limit and current value limit at respective points. The limit of manipulated variable is performed by calculation result in the manipulated limiter points 1 to 11. In the current limiter points 1 to 11, if the measurement current value exceeds the (setting value-current limiter sensitivity) of respective points, the manipulated variable at the current value limiter point is computed from the measured current value and the present manipulated variable, and the manipulated variable limit is performed from the computed manipulated variable. This manipulated variable changes every time the current value is measured. And, the final manipulated variable performs the limit by the smaller one of the two above.

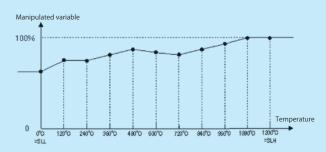

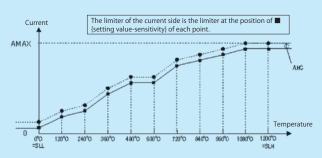


- Calculated by the manipulated variable and the current value of SLL in case the input is below the table range
- Calculated by the manipulated variable and the current value of SLH in case the input is over the table range
- e.g.) When the various settings and PV are as follows.

PV=120°C, manipulated variable limiter point 2=75.0%, current value limiter point 2=75A, present manipulated variable=60 %, AMAX=200A (equivalent to 0 to 5.0A), AHC=10A

⟨When measurement current value=100A⟩

The manipulated variable of the current value limiter point 2 (75A)-the current limiter sensitivity (10A) is calculated by the interaction between 0 to the present manipulated variable (60.0%)=0 to measurement current value (100A). The manipulated variable is 45.0 % according to the calculation.

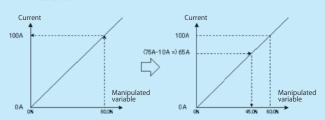

Pattern/Step setting

The following fixed step numbers are set by the pattern numbers about


| Pattern number | Step number |
|--------------------|-------------|
| When 1 is selected | 99 steps |
| When 2 is selected | 49 steps |
| When 3 is selected | 33 steps |
| When 4 is selected | 24 steps |
| When 5 is selected | 19 steps |
| When 6 is selected | 16 steps |
| When 7 is selected | 14 steps |
| When 8 is selected | 12 steps |

| Pattern number | Step number |
|---------------------|-------------|
| When 9 is selected | 11 steps |
| When 10 is selected | 9 steps |
| When 11 is selected | 9 steps |
| When 12 is selected | 8 steps |
| When 13 is selected | 7 steps |
| When 14 is selected | 7 steps |
| When 15 is selected | 6 steps |
| | |

Communication function (inclusive of Loader Communication)

A connection example with the personal computer


Centralized supervision with the personal computer would be possible with the connection like the chart below.

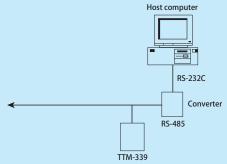

Loader communication



**Loader cable specification
[Appearance and structure]

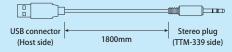

[Standard and performance]


| USB I/F standard | USB Specification 2.0 Compliant | |
|------------------------------------|---------------------------------|--|
| DTE (Personal computer side) speed | Up to 38400bps | |
| | Personal computer side: USB | |
| Connector specification | Temperature Controller side: | |

[Model] TTM-LOADER

Power failure function


In the event of power failure during which the unit had been in operation, the setting of the unit can be restored back to the time right before the power failure but on the following condition. However, if the PV at the time of recovery is outside the range of PV±Power Failure Recovery Temperature, operation will be in stop condition when it recovers. The alarm condition of Event function will be also restored back to the time right before the power failure.

- 1) When step 1 is in timer operation condition (SV=SLL) → Restores up to the point when the power failure occurred
- 2) During the ramp of SV increase or in soak → Restores with PV start Restores with the operation-end "END" when there is no SV.
- 3) During the ramp of SV decrease or while in soak after decrease → PV>Restores with PV start in the decreasing step in case of the decreasing point. PV≦Restores with the operation-end "END" in case of the decreasing point
- 4) While in *End* → Restores to END
- 5) Restores with pause when the power failure occurred during pause while in conditions mentioned in 1) to 3)
- 6) When in manual operation \rightarrow Restores with stop condition.

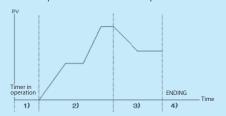


Auto operation (AUTO)/Manual operation (MANU)

The auto control and the manual control can be switched with the front key. Manual operation is a function in which the control output (manipulated variable) can be set and output the power manually regardless of the deviation condition. The system can be operated manually when performing operation check of the control-end (valve, heater, etc.) during the system trial run, or when normal control cannot be done due to sensor trouble, etc. Further, the switching can be done at ease as it is equipped with Balance-less Bumpless function which suppresses the sudden change of control output when switching the automatic control and manual control reciprocally and also prevents damage on the peripheral equipment as a result of sudden change and adverse effect to a control system.

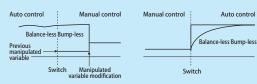

Blind function

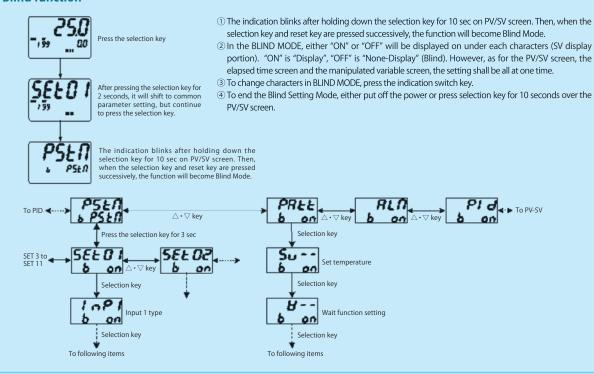


Time signal output

When each steps start, and after the ON delay timer is lapsed, the time signal output 1 to 4 are turned ON. Next, the output is turned OFF after the OFF delay timer is lapsed. The corresponding TS1 to TS4 lamps light when each time signal output is turned ON.

The function selections 0 to 5 of TS1 to TS4 are selected at each step, the above mentioned operation is performed by setting value in case of 1 to 4, the function is none when 0 is selected, the time signal output is always turned ON in the selection step when 5 is selected.


The output is returned till the returned point when the time is returned by $\ \bigtriangleup \boldsymbol{\cdot} \ \nabla$ key after the time course, and then the count is started from that point. (It's from the halfway.)

e.g.) After 3 minutes from the time the OFF delay ends, the output is turned ON and the OFF delay is counted for 2 minutes when the elapsed time is reversed 5 minutes back by ∇ key.

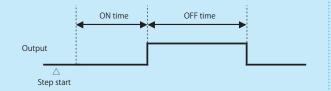

OFF point position movement of ON/OFF control

When the OFF point position movement is set to 0, the OFF point is the set value position.

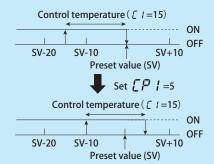

This is when off point position movement is set up with (+5). In the actual specification, there is no description change as above, but move above equal to (+5) as a position of ON/OFF.

When moved to negative side, the OFF point moves to opposite side to description above.

Signal output during operation/End signal output function

Signal output during operation


The relay output as the "signal output during operation" is always turned ON while in operation.

End signal output

The output as the End signal output is turned ON/OFF by the following flow when the program operation ends. The output is turned ON till 5.3.1 reset condition when the End signal ON time is set beyond the maximum of setting range ([-----] indication). The End lamp also lights.



Model Selection Chart

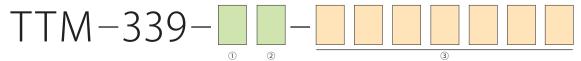

| | Input | Thermod | ouple (K, | | | | |
|-----|-------------|---------------------|------------|-------------|--|-------------------|--|
| | | R.T.D. (P1 | 100, JPt10 | | Multiple inputs, | | |
| | | Current | 4 to 20 m | ADC) | | Switchable by key | |
| | | Voltage | (0 to 1VDC | , 0 to 5 VD | | | |
| 1 | Output1 | P SSR drive voltage | | | | R or P selectable | |
| | | | | | | | |
| 2 | 2 Output2 P | | | SSR drive | ive voltage | | |
| | | I | | | 4 to 20 mADC | P or I selectable | |
| (3) | Option | | | Α | Relay contact (EV1 to EV3) "EV3" is none when relay contact is selected for output1 | | |
| | | | | В | Open collector TS1 to 4, TIME, EV4 "EV4" is none when relay contact is selected for output1 | | |
| | | | | С | | | |
| | | | | D | | | |
| | | | | E | DI input | | |
| | | | | М | Communication (RS485) | | |
| | | | | Т | Front face (English version) | | |



Head Office: 1-13-21, Tanashioda, Sagamihara Kanagawa 229-1125 Japan. Phone: +81-42-777-3311 FAX: +81-42-777-3751

E-Mail: overseas@toho-inc.co.jp Web site: http://www.toho-inc.co.jp